



APPLIANCES FOR LIVING

Congratulations, you are now the proud owner of an ARTUSI cooking appliance. Thank you for purchasing ARTUSI and welcome to the ARTUSI Family.

This instruction manual has been specially created to inform you of the full range of features your ARTUSI appliance has to offer and serves as an introduction to getting the very best out of your ARTUSI appliance.

We present detailed information on each of the features your ARTUSI appliance consists of. Once you have read this section you will be able to choose the most appropriate settings for your appliance when cooking different types of food.

We ask you to read the instructions in this booklet very carefully as this will allow you to get the best results from using your appliance. KEEP THE DOCUMENTATION OF THIS PRODUCT FOR FUTURE REFERENCE.

TO REGISTER YOUR PRODUCT WITH ARTUSI, PLEASE FILL OUT THE WARRANTY CARD AT THE END OF
THIS BOOKLET AND POST IT TO: **REPLY PAID 83617**
LEICHHARDT NSW 2040

Dear Artusi Customer, please read this user manual carefully before using the product and, keep it permanently at your disposal.

Note: This user manual is prepared for more than one model. Some of the features specified in this Manual may not be available on your appliance.

All our appliances are only for domestic use, not for commercial use. Products marked with (*) are optional.

“THIS APPLIANCE SHALL BE INSTALLED IN ACCORDANCE WITH THE REGULATIONS FORCE AND ONLY USED IN A WELL VENTILATED SPACE. READ THE INSTRUCTIONS BEFORE INSTALLING OR USING THIS APPLIANCE”

“Conforms with the WEEE Regulations.”

Dear Customer,

Thank you for choosing our range hood. This hood has been designed and manufactured specially with a view to satisfying your expectations and it will certainly constitute a fitting element of a modern outdoor kitchen.

Please read these instructions carefully before installing the hood. They will help you avoid mistakes during the installation and operation of the hood. We wish you a lot of satisfaction using our range hood.

The installation work must be undertaken by a qualified electrician and competent installer. The manufacturer disclaims all liability for any damage or injury caused by not following the instructions for installation contained in this manual.

The range hood is rated for use on 220~240V, 50Hz.

GUIDELINES CONCERNING SAFE USE

RECOMMENDATIONS:

1. Check if the voltage value provided on the rating plate corresponds to the local electric supply parameters.
2. Uncoil and straighten the electric supply cable before the installation.
3. This equipment is not to be used by persons (including children) with limited physical, sensory, or mental capacities, unless they do so under supervision or in accordance with the equipment use instructions given to them by persons who are responsible for their safety. Children must be prevented from playing with the range hood.

CAUTION:

 
1. The range hood, which serves the purpose of extracting kitchen vapors to the outside of a room (working in an exhaust mode) must be connected to a proper ventilation channel (it must not be connected to chimney ducts, smoke, and combustion gas ducts which are used).
2. The equipment must be mounted at the height of at least 650 mm above the work plate of the stove. The hood works the most effectively at the height of 650 mm to 750 mm.
3. An open flame must not be left under the range hood.
4. Dishes that are fried in fat/oil should be constantly monitored as overheated fat/oil can easily ignite.
5. The filter of the range hood must be replaced every 3 months. A filter that contains too much fat is flammable.
6. The equipment should be unplugged from the power outlet before replacing the filter or repairing the range hood.
7. When connecting the range hood to a 240 V power supply network, it must be connected to an electric outlet which is in good condition.
8. Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of

combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.

Electric supply requirements


It is necessary to check if the voltage value stated on the rating plate corresponds to the electric supply parameters in the house and that the electric supply is marked as ~ (alternating current). The range hood is an electric equipment made in the 1st class of fire protection and it must be connected to an outlet with working protection circuit.

Caution! If a supply cable becomes damaged, it must be replaced by a professional repairer.

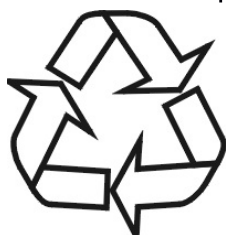

Our packaging is made of environmentally friendly materials, which can be reused:

 - The external packaging is made of cardboard/foil
- The FCKW free shape of foamed polystyrene (PS)
- Polyethylene (PE) foils and bags

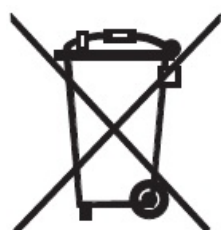

When disposing of the device, do not take it to regular municipal waste containers. Instead, take it to electrical and electronic waste recycling and reuse centres. A relevant label has been put on the device, its instructions manual, or on the package.

The device has been manufactured of recyclable materials.

Ask your local environmental care authority for information on location of such facilities.



INSTALLATION FOR ACH9BBQB

Installation of the range hood in the exhaust mode

The following rules must be strictly followed to obtain optimal air extraction

- Keep exhaust duct short and straight
- Do not reduce the size or restrict exhaust duct
- When using flexible duct always install the duct pulled taut to minimize pressure loss
- Ensure the exhaust ducting selected for installation complies with relevant standards and is fire retardant.

 
NOTE: Failure to observe these basic instructions will reduce the performance and increase the noise levels of the range hood.

1. Using a spirit level mark a vertical centre line on the wall where the hood is to be positioned, and a horizontal line where the hood base will be.

NOTE: The distance from the horizontal line to an electrical cook-top underneath must be minimum of 650mm to the gas cook top and a maximum height of 750mm (refer to table below).

Note: If the instructions of the hob specify a greater distance than the minimum above, then that shall be the minimum height for installation.

2. Remove all the filters and hang the range hood onto the expansion bolts and make any necessary adjustments to ensure horizontal alignment.
3. Tighten all expansion bolts, checking that they are all properly engaged onto the range hood through the neck of the key holes.

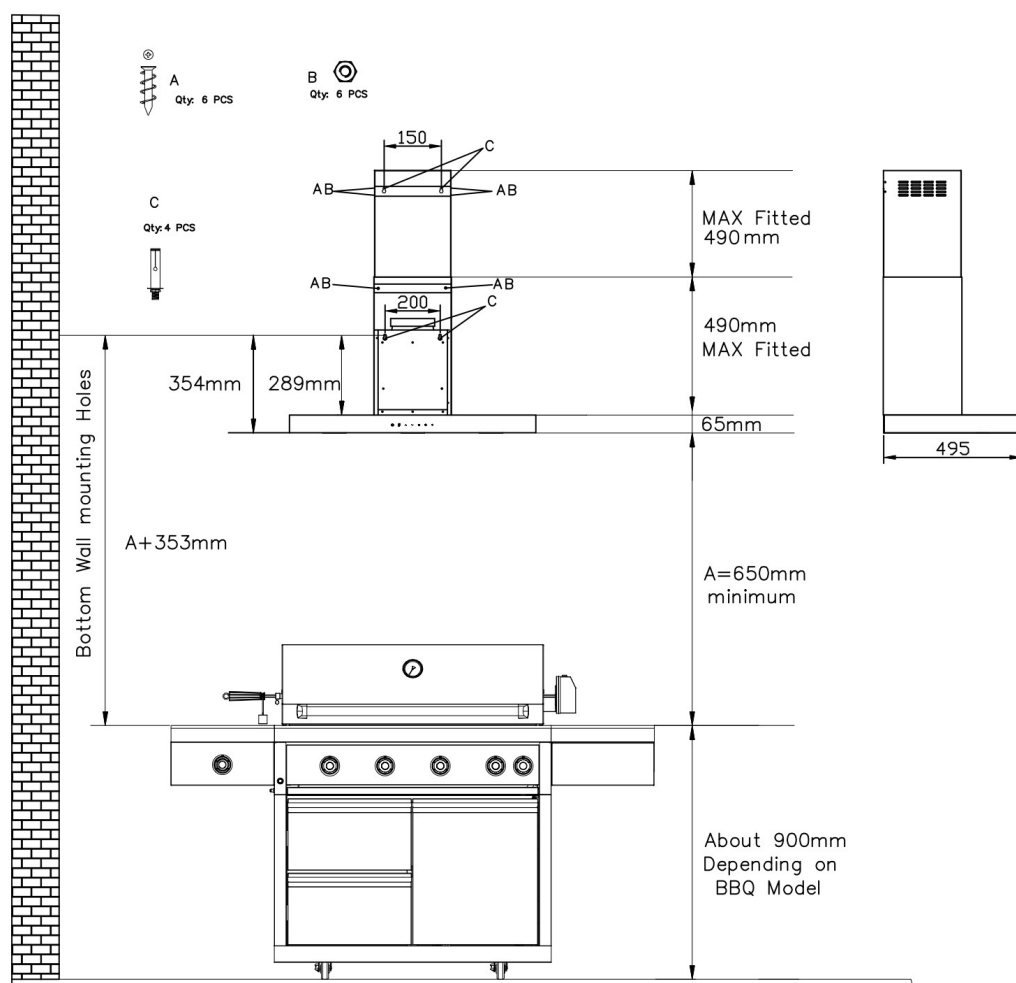

4. Connect to the power supply and test:

- a). Ensure that the voltage of the power supply matches that of the appliance.
- b). The power supply cord must be well fixed so that it cannot contact any sharp edges.
- c). Clean the area of all dust and waste matter to avoid it being sucked into the chimney before testing.
- d). Plug the appliance into the power supply socket.
- e). Check that the lights, motor and speed adjustments all work properly. Disconnect from the power supply before proceeding.

5. Fitting the ducting:

- a) The range hood must be ducted to open air using rigid or flexible fire-retardant ducting of a suitable length and matching outlet size. One 150cm or 200cm lengths of aluminum ducting are included.
- b). Use 2pcs ST3x8mm screws to fasten the flexible exhaust pipe (if included with the range hood) onto the outlet

6. Fitting the telescopic duct cover:

- a). Place the two part telescopic duct cover onto the range hood. Fasten the lower chimney with 2 x ST4x8mm screws, put the chimney in position.
- b). Determine the maximum upper chimney position, use 2pcs ST4x55mm screws to secure the upper decorative chimney bracket onto the wall.
- c). Extend the upper decorative chimney to desired height and fix it with the upper decorative chimney bracket by 4pcs ST4x8mm screws.
- d). Adjust to desired length and fasten into place using the two 6 mm screws provided in the bolt pack for masonry walls.
- e). Remove all protective film on chimney and range hood, the installation is now finished.

6. Final testing and checking:

Check that all bolts are properly tightened, fit the filters and recheck all range hood functions. Leave this copy of instructions with the user and instruct them to observe all safety warnings.

OPERATION INSTRUCTIONS

 


Button functions:


- Power: Power ON/OFF.
- Motor Speed Indicator: Shows current motor speed (1-3).
- Increase speed: motor speed increase, Time setting increase.
- Decrease Value: motor speed decrease, Time setting decrease.
- Light: Turns ON/OFF
- Power-Off Delay Digital Timer: Press the set/timer button for about 2 seconds to turn on the delay-off timer. The range hood is set for 3 minutes delay-off timer.

Remote control:


Your cooker hood is equipped with a remote control to allow you operate the unit remotely. Before use the remote control please remove the battery film!

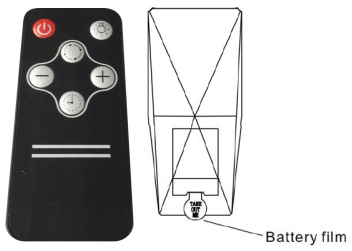

Below image shows the area for better effective remote control.

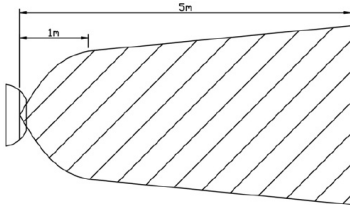 

TECHNICAL SPECS

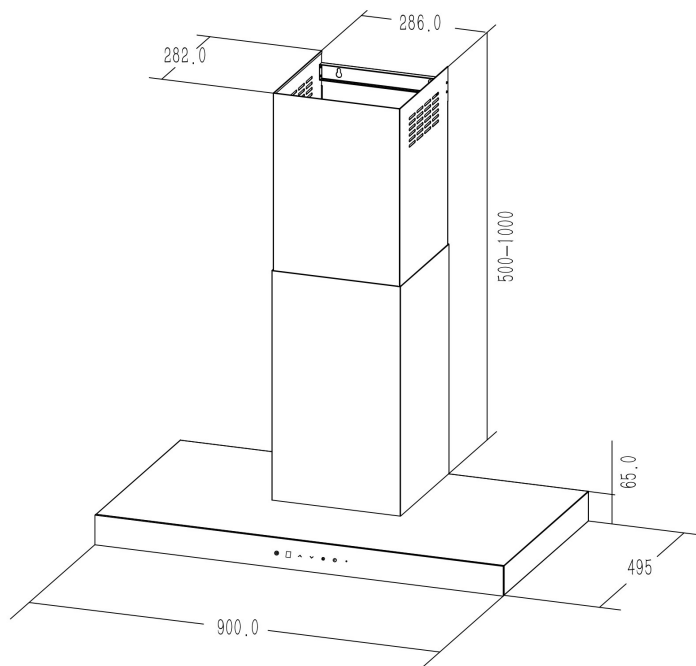 

Technical data

Model No.	ACH9BBQB
Material	Stainless Steel
Voltage/Frequency	220-240V~/50Hz
Number of motors	1
Fan speeds	3
Motor Power	≤198W
Max Extraction	≤850m³/hr
Lighting power	2 x2.0W LED
Filters	Washable 2 layers Stainless Steel Baffle Filters
Power cord length	2.0m
Outlet	1xØ 150mm
Noise	65dBA

Packing list

1. Main body
2. Stainless steel chimney duct(2pcs)
3. Brackets(2pcs)
4. Screws for complete range hood
5. Oil cup
6. User manual

Maintenance and cleaning

Clean the mainframe and the filters regularly.

There are two styles of inlet filters on these models. They are removed by pulling the lever on the adage of the filters and lifting them out of the slots which hold them.

Wash the filters in a dishwasher, or by hand using household dish-washing liquid and gently clean it with a soft brush.

Allow filters to dry thoroughly before placing them back in the rangehood.

When replacing, ensure the filters are put back in their correct position.

Wipe any dirt on the mainframe with a damp cloth and mild detergent. Wipe with a dry towel.

Do not use abrasive cleaners or scourers as these will damage the surface.

Commercial stainless steel cleaning products are available for more difficult staining. Wash the grease filters on a regular basis wearing gloves.

When the oil reaches $\frac{2}{3}$ level of the oil cup, empty the oil out of the oil cup and wash the oil cup.

When the range hood will be unused for a long period of time, unplug it from the electrical outlet.

When cleaning the product, ensure that the power is off.

4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an artusi product.

6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless Worldwide Appliances determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to Worldwide Appliances at the address on the Warranty Registration Card.

7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

(i) contravene the law of the relevant jurisdiction; or

(ii) cause any part of the Warranty to be void.

(c) Worldwide Appliances excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the artusi product) and (other than expressly provided for in these terms and conditions) subject to all terms, conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of Worldwide Appliances to you

for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of Worldwide Appliances to:

(i) replacing or repairing the defective part of the artusi product;

(ii) paying the cost of replacing or repairing the defective part of the artusi product;

(iii) replacing the artusi product; or

(iv) paying the cost of replacing the artusi product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

8. Defects

Any part of an artusi product deemed to be defective and replaced by Worldwide Appliances is the property of Worldwide Appliances. Worldwide Appliances reserves the right to inspect and test artusi products in order to determine the extent of any defect and the validity of a claim under the Warranty.

*To locate your closest artusi authorised service agent please contact us on 1300 652 100 or visit www.artusi.com.au

ALL SERVICE CALLS MUST BE BOOKED THROUGH AN AUTHORISED DEALER OR WARRANTY DEPARTMENT ON 1300 652 100 OR stokesaps.com.au/artusi-service

01032014



Warranty Card tear off

WARRANTY REGISTRATION CARD
01052013

Please complete and send to ARTUSI at: REPLY PAID 83617
LEIGHHARDT NSW 2040

Last Name:		First Name:
Address:		
State:	Postcode:	Email:
Home Phone:		Mobile:
Purchase Date: / /		(Please attach proof of purchase to validate warranty)

MODEL NUMBER	SERIAL NUMBER (if you cannot locate the serial number please call ARTUSI on 1300 694 583)
1	
2	
3	
4	

01032014



Worldwide Appliances Pty Limited

A.B.N. 45868077422

Office:

48-50 Moore Street, Leichhardt N.S.W 2040

Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 694 583

WARRANTY REGISTRATION

Your ongoing satisfaction with your artusi product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the artusi product purchased by you.

PRIVACY

Worldwide Appliances respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the Worldwide Appliances Privacy Policy is available at www.artusi.com.au. Worldwide Appliances will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any Worldwide Appliances related company;
3. any service provider which provide services to artusi or assist artusi in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is to keep a record of the artusi product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your artusi product. Worldwide Appliances may contact you at any one or more of the address, email address or telephone numbers set out in the Warranty Registration Card. Please contact artusi on 1300 694 583 should you not wish to be contacted by Worldwide Appliances.

WARRANTY

1. Warranty

Worldwide Appliances warrants that each artusi product will remain, for a period of either 12 months or 24 months of warranty. All Warranties are valid from the original date of purchase, And warranty claims must be accompanied by the proof of purchase.

24 months warranty products:

All Built-in Appliances – Limited to Ovens, Gas, Induction and Electric Cooktops, and All Rangehoods

Freestanding Cookers - Gas and Electric Models (900mm Width)

Dishwashers - Freestanding, Fully Integrated, Semi Integrated and built-in

12 months warranty products:

Freestanding Cookers - Gas and Electric Models in 50cm, 54cm and 60cm Widths

Portable Appliances* – Benchtop Models and Portable Gas Models

2. What is not Covered by the Warranty.

The Warranty does not apply if an artusi product is defective by a factor other than a defect arising in the manufacture of the artusi product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the artusi product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when Worldwide Appliances is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of Worldwide Appliances;
- (g) repair, modification or tampering by the purchaser or any person other than Worldwide Appliances, an employee of Worldwide Appliances or an authorised artusi service contractor*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by artusi.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the artusi product handbook provided to the purchaser upon purchase of the artusi product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the artusi in respect of an artusi product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in artusi products.

3. Domestic Use

Each artusi product is made for domestic use. This Warranty may not extend to artusi products used for commercial purposes.

Continued over...



DISCLAIMER

Worldwide Appliances PTY LTD, trading as ARTUSI, is continually seeking ways to improve the design specifications, aesthetics and production techniques of its products. As a result alterations to our products and designs take place continually. Whilst every effort is made to produce information and literature that is up to date, this brochure should not be regarded as an infallible guide to the current specifications, nor does it constitute an offer for the sale of any particular product. Product dimensions indicated in our literature is indicative only. Actual product only should be used to define dimension cutouts. Distributors, and retailers are not agents of ARTUSI and are not authorised to bind ARTUSI by any express or implied undertaking or representation.

ARTUSI OFFICES ARE OPEN DAILY FROM 9AM-5PM AND SATURDAYS 10AM-4PM

NSW & ACT (HEAD OFFICE)
48-50 MOORE STREET
LEICHHARDT
F 02 8569 4699

VIC, TAS & SA
1211 TOORAK ROAD
CAMBERWELL
F 03 9809 2155

QLD
1/42 CAVENDISH ROAD
COORPAROO
F 07 3397 0850

WA & NT
UNIT 10/55 HOWE STREET
OSBORNE PARK
F 08 9201 9188

NZ
PO BOX 11160
SOCKBURN CHRISTCHURCH
F 03 344 5906

P: 1300 649 583

ARTUSI.COM.AU