




**60cm Induction Cooktop**  
**Model CI6SE3**

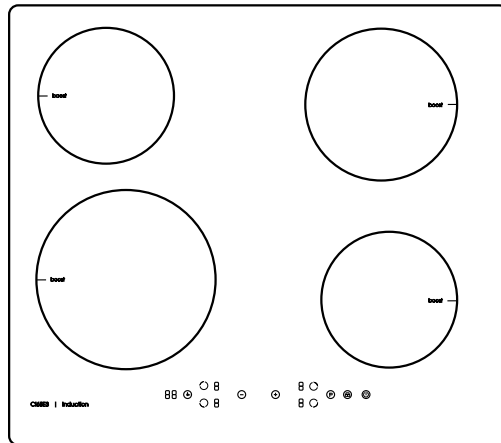

**INSTRUCTION /  
INSTALLATION MANUAL**

PLEASE READ THE USER MANUAL CAREFULLY BEFORE USE

## Product/Installer details

For future reference we suggest that you staple a copy of your purchase receipt here and complete the below so the information is always at hand.

### Product Details

Model number: \_\_\_\_\_

Description: \_\_\_\_\_

Serial number: \_\_\_\_\_

(Located on the product rating label)

### Purchase Details

Date of purchase: \_\_\_\_\_

Place of purchase: \_\_\_\_\_

Store name: \_\_\_\_\_

Address: \_\_\_\_\_

Telephone: \_\_\_\_\_

Invoice/receipt number: \_\_\_\_\_

### Installation Details

**Electrical** date of installation: \_\_\_\_\_

**Electrician** Installers Details: Company/Installers Name: \_\_\_\_\_

Licence Number: \_\_\_\_\_

Telephone Number: \_\_\_\_\_

**Gas** date of installation: \_\_\_\_\_

**Gas** installers details: Company/Installers Name: \_\_\_\_\_

Licence Number: \_\_\_\_\_

Telephone Number: \_\_\_\_\_

**Plumbing** date of installation: \_\_\_\_\_

**Plumbers** installers details: Company/Installers Name: \_\_\_\_\_

Licence Number: \_\_\_\_\_

Telephone Number: \_\_\_\_\_

Dear Customer,

Congratulations on the purchase of your new product from  
Glen Dimplex Australia Pty Ltd.

We recommend you please take some time to read the instruction manual thoroughly to familiarise yourself with the functionality and operations to ensure optimum performance of your new appliance.

After reading the manual, please store it in a safe and accessible location for future reference.

## **Installation**

The installation of your new appliance must be carried out by a qualified installer/technician in accordance to local regulations.

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

## **Customer Care**

Our Customer Care centre is available should you wish to learn more about your appliance in relation to how to use it to its best potential, or tips on cleaning as well as available accessories.

For further details please contact our Customer Care team on  
1800 444 357 or email: [customercare@hapl.com.au](mailto:customercare@hapl.com.au)

Thank you

Regards,  
Glen Dimplex Australia



# CONTENTS

Contents	1
Safety Warnings - Installation	2-3
Safety Warnings - Operation and Maintenance	3-6
Product Overview	7
What is Induction Cooking?	8
Before using your new cooktop	8
Using the Touch Controls	8
Choosing the right cookware	9
Using your Cooktop	10
Using boost function	11
Locking the controls	12
Residual Heat Indicators	12
Auto Shutdown	12
Using the Timer	13-15
Cooking Guidelines	16-17
Heat Settings	17
Care and Cleaning	18
Troubleshooting Guide - hints and tips	19
Failure Display and Inspection	20
Technical Specification	20
Installation - material and dimensions	21
Installation - ventilation and clearances	22
Installation - fixing cooktops to work surface	23
Installation - electrical connection	24

## **SAFETY WARNINGS**

**PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE.**

### **Installation**

#### **Electrical Shock Hazard**

- Disconnect the appliance from the mains electricity supply before carrying out any work or maintenance on it.
- Connection to a good earth wiring system is essential and mandatory.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- Alterations to the domestic wiring system must only be made by a qualified electrician.
- Failure to follow this advice may result in electrical shock or death.

#### **Cut Hazard**

- Take care - panel edges are sharp.
- Failure to use caution could result in injury or cuts.

#### **Important safety instructions**

- Read these instructions carefully before installing or using this appliance.
- No combustible material or products should be placed on this appliance at any time.
- Please make this information available to the person responsible for installing the appliance as it could reduce your installation costs.
- In order to avoid a hazard, this appliance must be installed according to these instructions for installation.
- This appliance is to be properly installed and earthed only by a suitably qualified person.

## SAFETY WARNINGS

- This appliance should be connected to a circuit which incorporates an isolating switch providing full disconnection from the power supply.
- **WARNING:** Use only cooktop guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or cooktop guards incorporated in the appliance. The use of inappropriate guards can cause accidents.
- Failure to install the appliance correctly could invalidate any warranty or liability claims.
- Regarding the details of installation, please refer to the section 'Installation'.

## Operation and Maintenance

### Electrical Shock Hazard

- Do not cook on a broken or cracked cooktop. If the cooktop surface is broken or cracked, switch the appliance off immediately at the mains power supply (wall switch) and contact a qualified technician.
- Switch the cooktop off at the wall before cleaning or maintenance.
- Failure to follow this advice may result in electrical shock or death.

### Health Hazard

- This appliance complies with electromagnetic safety standards.

### Hot Surface Hazard

- During use, accessible parts of this appliance will become hot enough to cause burns.
- Do not let your body, clothing or any item other than suitable cookware contact the ceramic glass until the surface is cool.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.

## **SAFETY WARNINGS**

- Children less than 8 years of age shall be kept away unless continuously supervised.
- Handles of saucepans may be hot to touch. Check saucepan handles do not overhang other cooking zones that are on. Keep handles out of reach of children.
- Failure to follow this advice could result in burns and scalds.

### **Cut Hazard**

- The razor-sharp blade of a cooktop scraper is exposed when the safety cover is retracted. Use with extreme care and always store safely and out of reach of children.
- Failure to use caution could result in injury or cuts.

### **Important safety instructions**

- Never leave the appliance unattended when in use. Boil over causes smoking and greasy spillovers that may ignite.
- Never use your appliance as a work or storage surface.
- Never leave any objects or utensils on the appliance.
- Never use your appliance for warming or heating the room.
- After use, always turn off the cooking zones and the cooktop as described in this manual (i.e. by using the touch controls).
- Do not allow children to play with the appliance or sit, stand, or climb on it.
- Do not store items of interest to children in cabinets above the appliance. Children climbing on the cooktop could be seriously injured.
- Do not leave children alone or unattended in the area where the appliance is in use.

## SAFETY WARNINGS

- Children or persons with a disability which limits their ability to use the appliance should have a responsible and competent person to instruct them in its use. The instructor should be satisfied that they can use the appliance without danger to themselves or their surroundings.
- Do not leave children alone or unattended in the area where the appliance is in use.
- Children or persons with a disability which limits their ability to use the appliance should have a responsible and competent person to instruct them in its use. The instructor should be satisfied that they can use the appliance without danger to themselves or their surroundings.
- Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be done by a qualified technician.
- Do not use a steam cleaner to clean your cooktop.
- Do not place or drop heavy objects on your cooktop.
- Do not stand on your cooktop.
- Do not use pans with jagged edges or drag pans across the glass surface as this can scratch the glass.
- Do not use scourers or any other harsh abrasive cleaning agents to clean your cooktop, as these can scratch the ceramic glass.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in a domestic household environment only! Commercial use of any kind is not covered under the manufacturer's warranty!
- **WARNING:** The appliance and its accessible parts become hot during use.
- Care should be taken to avoid touching heating elements.



## SAFETY WARNINGS


- Children less than 8 years of age shall be kept away unless continuously supervised.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **WARNING:** Unattended cooking on a cooktop with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock, for hob surfaces of glass-ceramic or similar material which protect live parts.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- Power cord can't be accessible after installation.

**Congratulations** on the purchase of your new cooktop. We recommend that you spend some time to read this Instruction / Installation Manual in order to fully understand how to install correctly and operate it.

Read all the safety instructions carefully before use and keep this Instruction / Installation Manual for future reference.


## Product Overview – CI6SE3

### Top View

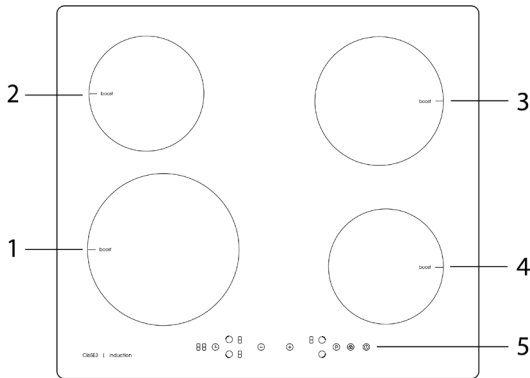

1. max. 2300/3000 W zone
2. max. 1200/1500 W zone
3. max. 1800/2100 W zone
4. max. 1200/1500 W zone
5. Control panel


### The Control Panel

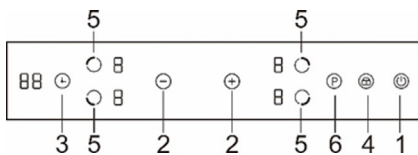

1. ON/OFF switch
2. Select power level
3. Setting the timer
4. Child lock
5. Select heating zone
6. Boost control

## What is Induction Cooking?

Induction cooking is a safe, advanced, efficient, and economical cooking technology. It works by electromagnetic vibrations generating heat directly in the pan, rather than indirectly through heating the glass surface. The glass becomes hot only because the pan eventually warms it up. **NOTE:** Cookware for Induction cooktops, due to the nature of the technology, need to have magnetic properties in order to work. Refer to 'Choosing the right cookware' for details about this.

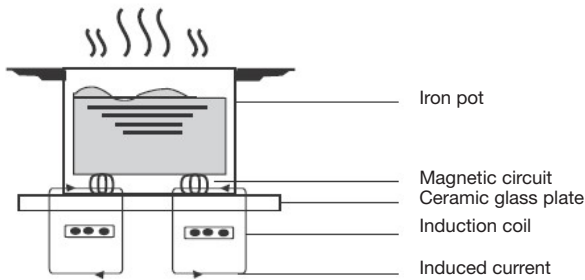


## Before using your new Cooktop


- Read this guide, taking special note of the 'Safety Warnings' section.
- Remove any protective film that may still be on your Induction cooktop.
- DO NOT use the cooktop if cracked or damaged in any way.


## Using the Touch Controls

 - The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip. See illustration.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.



## Choosing the right cookware

- Only use cookware with a base suitable for induction cooking. Look for the induction symbol on the packaging or on the bottom of the pan.
- You can check whether your cookware is suitable by carrying out a magnet test. Move a magnet towards the base of the pan. If it is attracted, the pan is suitable for induction.
- If you do not have a magnet:
  1. Put some water in the pan you want to check.
  2. Follow the steps under 'To start cooking'.
  3. If  does not flash in the display and the water is heating, the pan is suitable.
- Cookware made by the following materials is not suitable: pure stainless steel, aluminum or copper without a magnetic base, glass, wood, porcelain, ceramic, and earthenware.

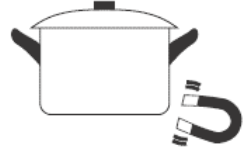


Size of Cooking Zone (mm)	Cookware minimum diameter (mm)
160	120
180	140
210	160


Do not use cookware with jagged edges or those with a curved base. Make sure that the base of your pan is smooth, sits flat against the glass.



Ideally cookware should be the same size as the cooking zone. Refer table above. Always centre your pan on the cooking zone.

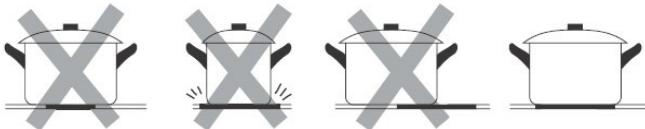

Always lift pans off the cooktop – do not slide, or they may scratch the glass

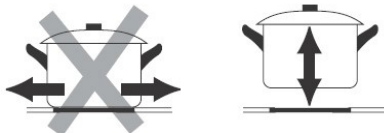


# Using your cooktop


## To start cooking

After power on, the buzzer beeps once, all the indicators light up for 1 second then go out, indicating that the cooktop has entered the state of standby mode.

 1. Touch the ON/OFF  switch. all the indicators show “-“



2. Place a suitable pan on the cooking zone that you wish to use. Make sure the bottom of the pan and the surface of the cooking zone is clean and dry.

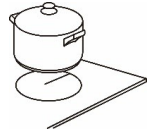


3. Touch the desired heating zone selection control, an indicator next to the key will flash.



4. Select a heat setting by touching the “+” or “-” controls.

 - If you don't choose a heat setting within 1 minute, the Induction cooktop will automatically switch off. You will need to start again at step 1.
- You can modify the heat setting at any time during cooking.



## When you have finished cooking

 
1. Touch the desired heating zone selection that you wish to switch off.



2. Turn the cooking zone off by touching “+” or “-” control to “0”. Make sure the display shows “0”.



3. Turn the whole cooktop off by touching the ON/OFF control.



4. Beware of hot surfaces. Each zone is fitted with residual heat indicators and an “H” will show when the each of the cooking zones are too hot to touch. It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans, use the hotplate that is still hot.


**H**


## Using boost function

### Activate the boost function

1. Select the desired zone. For example, Front left zone.



2. Touching the “boost” key  until power level indication shows “P”.

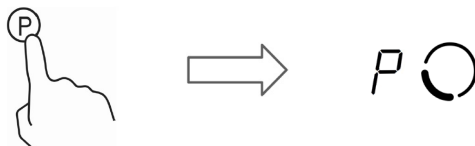


### Cancel boost function

1. Select the desired zone. For example, Front left zone.



 2. Touch the “+” or “-” to cancel the Boost function, and select the level you want to set.



• NOTE: For technical reasons and protection of the cooktop the Boost function will only last for 5 minutes, after that the zone will go to level 9 automatically.


## Locking the controls

- You can lock the controls to prevent unintended use (for example accidentally turning the cooking zones on).
- When the controls are locked, all the controls except the ON/OFF control are disabled.

### To lock the controls

Touch the keylock  control. The timer indicator will show “Lo “.

### To unlock the controls

1. Make sure the cooktop is turned on.
2. Touch and hold the keylock  control for 3 seconds.
3. You can now start using your cooktop.



When the cooktop is in lock mode, all the controls are disabled except the ON/OFF, you can always turn the cooktop off with the ON/OFF control in an emergency, but you shall unlock the cooktop first in the next operation.

## Residual Heat Indication

When the cooktop has been operating for some time, there will be some residual heat. The letter “H” appears to warn you to keep away from it.

**H**

## Auto Shutdown

Safety feature of the cooktop is auto shut down. This occurs whenever you forget to switch off a cooking zone. The default shutdown times are shown in the table below:

Power level	1	2	3	4	5	6	7	8	9
Default shutdown time (hours)	8	8	8	4	4	4	2	2	2

## Using the Timer

You can use the timer in two different ways:

You can use it as a **minute minder**. In this case, the timer **WILL NOT** turn any cooking zone off when the set time has been reached. The second way is to set a **cut-off timer** where the cooking zone **WILL TURN OFF** when the time set is reached. The maximum time that can be set is 99 minutes and can be used on several zones at the same time.

### Using the Timer as a Minute Minder

 
1. Make sure the cooktop is turned on and zone selection key is not activated (zone indication ‘-’ is not blinking).

Note: you can set minute minder before or after cooking zone power setting finished.

2. Touch timer key, “00” will show in the timer display and “0” will blink.




3. Set the time by touching the “+” or “-” controls of the timer (e.g. 5)



4. Touch timer control again, then “0” will flash.



 5. Set the time by touching the “+” or “-”, now the timer you set is 95 minutes.



6. When the time is set, it will begin to count down immediately. The display will show the remaining time.



7. Buzzer will bip for 30 seconds and the timer indicator shows “-” when the setting time finished.



## Using the Timer to switch off one or more cooking zones

 
1. Touching the heating zone selection control that you want to set the timer for.



2. Touch timer key, “00” will show in the timer display and “0” will blink.




3. Set the time by touching the “+” or “-” controls



4. Touch timer control again, then “0” will flash.




 5. Set the time by touching the “+” or “-” controls now the timer you set is 95 minutes.



6. When the time is set, it will begin to count down immediately. The display will show the remaining time.

**NOTE:** There will be a red dot in the right bottom corner of power level indication which indicating that zone is selected

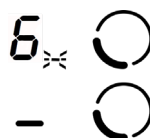

7. When cooking timer expires, the corresponding cooking zone will switch off automatically.


**NOTE:** Other cooking zones will keep operating if they had been turned on previously.

### If the timer is set on more than one zone:

1. When you set the timer for several cooking zones, red dots of the relevant cooking zones are indicated. The timer display shows the min. timer. The dot of the corresponding zone blinks.



2. Once the countdown timer expires, the corresponding zone will switch off. Then it will show the new min. timer and the dot of corresponding zone will flash.

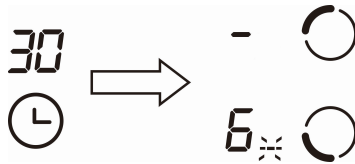

**NOTE:** Touch the heating zone selection control, the corresponding timer will be shown in the timer indicator.

### Cancelling the timer

1. Touching the heating zone selection control that you want to cancel the timer.



2. Touching the timer control, the indicator will flash.



3. Touching “+” or “-” control to set the timer to “00”, the timer is cancelled.

## Cooking Guidelines



Take care when frying as the oil and fat heat up very quickly, particularly if you are using Boost. At extremely high temperatures oil and fat will ignite spontaneously and this presents a serious fire risk.

## Cooking Tips

- When food comes to the boil, reduce the power setting.
- Using a lid will reduce cooking times and save energy by retaining the heat.
- Minimise the amount of liquid or fat to reduce cooking times.
- Start cooking on a high setting and reduce the setting when the food has heated through.

## Simmering, cooking rice

- Simmering occurs below boiling point, at around 85°C, when bubbles are just rising occasionally to the surface of the cooking liquid. It is the key to delicious soups and tender stews because the flavours develop without overcooking the food. You should also cook egg-based and flour thickened sauces below boiling point.
- Some tasks, including cooking rice by the absorption method, may require a setting higher than the lowest setting to ensure the food is cooked properly in the time recommended.

## Searing steak

To cook juicy flavoursome steaks:

1. Stand the meat at room temperature for about 20 minutes before cooking.
2. Heat up a heavy-based frying pan.
3. Brush both sides of the steak with oil. Drizzle a small amount of oil into the hot pan and then lower the meat onto the hot pan.
4. Turn the steak only once during cooking. The exact cooking time will depend on the thickness of the steak and how cooked you want it. Times may vary from about 2 – 8 minutes per side. Press the steak to gauge how cooked it is – the firmer it feels the more 'well done' it will be.
5. Leave the steak to rest on a warm plate for a few minutes to allow it to relax and become tender before serving

## For stir-frying

1. Choose a compatible flat-based wok or a large frying pan.
2. Have all the ingredients and equipment ready. Stir-frying should be quick. If cooking large quantities, cook the food in several smaller batches.
3. Preheat the pan briefly and add two tablespoons of oil.
4. Cook any meat first, put it aside and keep warm.
5. Stir-fry the vegetables. When they are hot but still crisp, turn the cooking zone to a lower setting, return the meat to the pan and add your sauce.
6. Stir the ingredients gently to make sure they are heated through.
7. Serve immediately.

## Heat Settings

**NOTE:** The below table is a guide ONLY for heat setting selections and could vary based on the power and size of the individual cooking zones. We suggest to use a heat setting initially and increase or decrease settings based on your personal preferences. If this is your first experience with an Induction cooktop you may notice a big difference from your previous cooktop fuel type.

Heat setting	Suitability
1 - 2	<ul style="list-style-type: none"><li>• delicate warming for small amounts of food</li><li>• melting chocolate, butter, and foods that burn quickly</li><li>• gentle simmering</li><li>• slow warming</li></ul>
3 - 4	<ul style="list-style-type: none"><li>• reheating</li><li>• rapid simmering</li><li>• cooking rice</li></ul>
5 - 6	<ul style="list-style-type: none"><li>• pancakes</li></ul>
7 - 8	<ul style="list-style-type: none"><li>• sauteing</li><li>• cooking pasta</li></ul>
9	<ul style="list-style-type: none"><li>• stir-frying</li><li>• searing</li><li>• bringing soup to the boil</li><li>• boiling water</li></ul>

## Care and Cleaning



Refer to the SAFETY WARNINGS section at the front of this manual for detailed information regarding safety when cleaning. Cooktop should be powered off before any Maintenance or cleaning is carried out. Use of steam cleaners for cleaning is **not permitted**. The below table is a guide to carry out cleaning of your cooktop.

What?	How?	Important!
Everyday soiling on glass (fingerprints, marks, stains left by food or non-sugary spillovers on the glass)	<ol style="list-style-type: none"> <li>1. Switch the power to the cooktop off.</li> <li>2. Apply a cooktop cleaner while the glass is still warm (but not hot!)</li> <li>3. Rinse and wipe dry with a clean cloth or paper towel.</li> <li>4. Switch the power to the cooktop back on.</li> </ol>	<ul style="list-style-type: none"> <li>• When the power to the cooktop is switched off, there will be no 'hot surface' indication but the cooking zone may still be hot! Take extreme care.</li> <li>• Heavy-duty scourers, some nylon scourers and harsh/abrasive cleaning agents may scratch the glass. Always read the label to check if your cleaner or scourer is suitable.</li> <li>• Never leave cleaning residue on the cooktop: the glass may become stained.</li> </ul>
Boilovers, melts, and hot sugary spills on the glass	<p>Remove these immediately with a fish slice, palette knife or razor blade scraper suitable for ceramic glass cooktops, but beware of hot cooking zone surfaces:</p> <ol style="list-style-type: none"> <li>1. Switch the power to the cooktop off at the wall.</li> <li>2. Hold the blade or utensil at a 30° angle and scrape the soiling or spill to a cool area of the cooktop.</li> <li>3. Clean the soiling or spill up with a dish cloth or paper towel.</li> <li>4. Follow steps 2 to 4 for 'Everyday soiling on glass' above.</li> </ol>	<ul style="list-style-type: none"> <li>• Remove stains left by melts and sugary food or spillovers as soon as possible. If left to cool on the glass, they may be difficult to remove or even permanently damage the glass surface.</li> <li>• Cut hazard: when the safety cover is retracted, the blade in a scraper is razor-sharp. Use with extreme care and always store safely and out of reach of children.</li> </ul>
Spillovers on the touch controls	<ol style="list-style-type: none"> <li>1. Switch the power to the cooktop off.</li> <li>2. Soak up the spill</li> <li>3. Wipe the touch control area with a clean damp sponge or cloth.</li> <li>4. Wipe the area completely dry with a paper towel.</li> <li>5. Switch the power to the cooktop back on.</li> </ol>	<ul style="list-style-type: none"> <li>• The cooktop may beep and turn itself off, and the touch controls may not function while there is liquid on them. Make sure you wipe the touch control area dry before turning the cooktop back on.</li> </ul>

**Note:** To keep the ceramic glass surface in good condition a cleaner like Hillmark's Cerapol is recommended. For stubborn stains a scraper should be used to remove excess spills.

## Troubleshooting Guide - hints and tips

Refer to the below Troubleshooting Guide should you experience any issues with your cooktop. If these are not helpful please contact our Customer Care team for assistance.

Problem	Possible causes	What to do
The cooktop cannot be turned on.	No power.	Make sure the cooktop is connected to the power supply and that it is switched on.  Check whether there is a power outage in your home or area. If you've checked everything and the problem persists, call to book a service call.
The touch controls are unresponsive.	The controls are locked.	Unlock the controls. See section 'Using your ceramic cooktop' for instructions.
The touch controls are difficult to operate.	There may be a slight film of water over the controls or you may be using the tip of your finger when touching the controls.	Make sure the touch control area is dry and use the ball of your finger when touching the controls.
The glass is getting scratched.	Rough-edged cookware. Dragging of cookware across ceramic surface.  Unsuitable, abrasive scourer or cleaning products being used.	Use cookware with flat and smooth bases. See 'Choosing the right cookware'.  See 'Care and cleaning'.
Some pans make crackling or clicking noises.	This may be caused by the construction of your cookware (layers of different metals vibrating differently).	This is normal for cookware and does not indicate a fault.
The induction cooktop makes a low humming noise when used on a high heat setting.	This is caused by the technology of induction cooking.	This is normal, but the noise should quieten down or disappear completely when you decrease the heat setting.
Fan noise coming from the induction cooktop.	A cooling fan built into your induction cooktop has come on to prevent the electronics from overheating. It may continue to run even after you've turned the induction cooktop off.	This is normal and needs no action. Do not switch the power to the induction cooktop off at the wall while the fan is running.
Pans do not become hot and appears in the display.	The induction cooktop cannot detect the pan because it is not suitable for induction cooking. The induction cooktop cannot detect the pan because it is too small for the cooking zone or not properly centered on it.	Use cookware suitable for induction cooking. See section 'Choosing the right cookware'. Centre the pan and make sure that its base matches the size of the cooking zone.
The induction cooktop or a cooking zone has turned itself off unexpectedly, a tone sounds and an error code is displayed (typically alternating with one or two digits in the cooking timer display).	Technical fault	Please note down the error letters and numbers, switch the power to the induction cooktop off at the wall, and contact a qualified technician.

## Failure Display and Inspection



If an abnormality comes up, the induction cooktop will enter the protective state automatically and display corresponding protective codes:

Error code	Meaning	What to do
E4 / E5	Temperature sensor failure	Please contact Customer Care Team
E7 / E8	Failure of the IGBT Temperature sensor	Please contact Customer Care Team
E2 / E3	Abnormal supply voltage	Please inspect whether power supply is normal. Power on after the power supply is normal.
E6 / E9	Bad induction cooktop heat radiation	Please restart after the induction cooktop cools down

**Note:** The above is a summary of the most common failures. **DO NOT** disassemble the unit by yourself to avoid any dangers and damages to the induction cooktop.

## Technical Specification

Induction (ceramic glass) cooktop	Model: CI6SE3
Number of cooking zones	4 (with booster functions)
Supply voltage	220 - 240V ~ 50 Hz or 60Hz*
Connected load	7200 Watts
Product Dimension - D x W x H (mm)	590 x 520 x 58
Cut out Dimensions - A x B (mm)	560 x 490

\*60Hz frequency relates to other countries around the world, not Australia.


**Note:** As we continually strive to improve our products we may change specifications and designs without prior notice.

## Installation - materials and dimensions

Before you install the cooktop, make sure that

- The work surface is square and level, and no structural members interfere with space requirements. Work surface to be made of heat-resistant material. Work surface material thickness should be at least 30mm thick.
- If the cooktop is installed above an oven, the oven has a built-in cooling fan. Both appliances generate a lot of heat during operation.
- The installation will comply with all clearance requirements and applicable standards and regulations. A minimum of 50mm space shall be preserved around the cutout opening for installation and use of larger cookware.
- A suitable isolating switch providing full disconnection from the mains power supply is incorporated in the permanent wiring, mounted and positioned to comply with the local wiring rules and regulations.
- The isolating switch must be of an approved type and provide a 3mm air gap contact separation in all poles (or in all active [phase] conductors if the local wiring rules allow for this variation of the requirements).
- The isolating switch will be easily accessible to the customer with the hob installed
- If any doubts regarding instalation requirements you may consult local building authorities and current by-laws.
- Use of heat-resistant and easy-to-clean finishes (such as ceramic tiles) for the wall surfaces surrounding the cooktop is recommended.
- Cut out the work surface according to the sizes shown in table below.

**Warning:** The work surface material must use the impregnated wood or other insulated material.

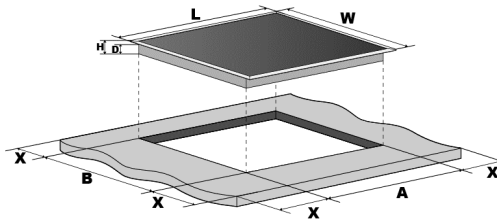

Model No.	L (mm)	W (mm)	H (mm)	D (mm)	A - (mm)	B (mm)	X (mm)
CI6SE3	590	520	58	54	560	490	50 Min.



## Installation - ventilation and clearances




In all circumstances, make sure the cooktop is well ventilated and the air intakes and outlets are not blocked. **DO NOT** install the cooktop if glass is cracked or any other damaged realised.

The safety distance between the cooktop and the cupboard above the cooktop should be at least 760mm. Any rangehood installed above the cooktop should be no less than 650mm above the surface of the cooktop. Be aware that due to the nature of Induction cooktops excessive condensation may be present especially in the colder months or climates.

**NOTE:** If the cooktop is installed above an opening drawer or cupboard a thermal protection heat barrier **MUST BE** fitted 50mm below the base of the underside of the cooktop to avoid possibly scalding when accessing the drawer or cupboard.

Refer to the below illustration and table re other ventilation and clearance requirement.

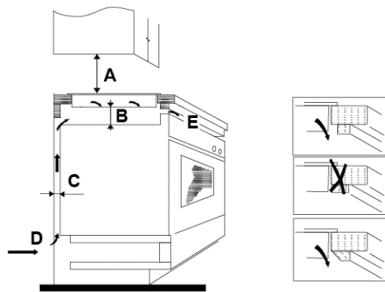

A (mm)	B (mm)	C (mm)	D	E
760 *	50 Min.	20 Min.	Air intake	Air outlet

\* This dimension relates to adjoining cupboards. For a rangehood installed above the cooktop the minimum distance is 650mm from cooktop surface highest point to the bottom of the rangehood filters.


**After the cooktop has been installed, make sure that**

- The power supply cable is not accessible through cupboard doors or drawers.
- There is adequate flow of air from outside the cabinetry to the base of the cooktop.
- The isolating switch is easily accessible by the customer.

## Installation - fixing cooktop to work surface



### Fitting moisture / dirt seal

- The cooktop should be placed on a stable, smooth surface (use the packaging). Fit moisture / dirt seal to underside edge of the cooktop. See below illustration. When cooktop affixed to work surface this seal will reduce risk of moisture and dirt from getting underneath the edge of the ceramic glass surface.

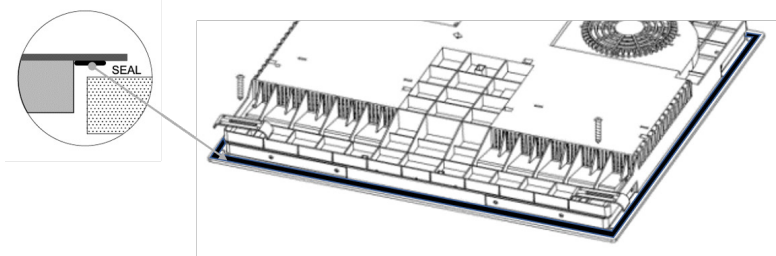

### Locating and fitting the fixing brackets and cooktop to work surface

- Whilst the cooktop is upside down the fixing brackets should be put into place
- Fit the fixing brackets to the base of the cooktop in the four corner locations. The brackets can be reversed base on the thickness of the work surface.
- Place cooktop into pre-cut housing in work surface.
- Fix the cooktop to the work surface by screwing the four brackets on the bottom of cooktop (see picture) after installation.

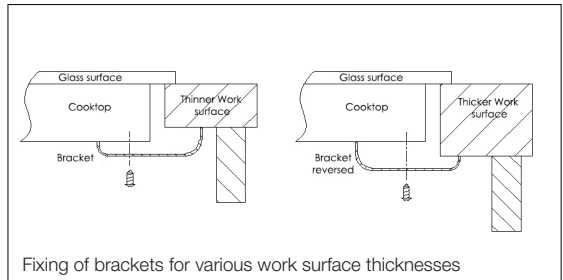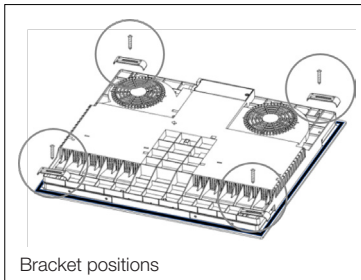

## Installation - electrical connection




The cooktop **MUST BE** installed by qualified personnel or technicians. Please never conduct the operation by yourself.

- The cooktop shall not be mounted close to cooling equipment, dishwashers and rotary dryers. There will be a dedicated power source for the cooktop.
- The cooktop shall be installed with sufficient ventilation to ensure its reliability.
- The wall, work surface, adjoining cupboards, doors and adhesives shall be able to withstand high heat generated by the cooktop.
- For cleaning, steam cleaners are not to be used.
- This ceramic cooktop can be connected only to a supply with system impedance no more than 0.427 ohm. In case necessary, please consult your supply authority for system impedance information.
- The cable must not be bent or compressed. If the cable is damaged or needs replacing, this should be done only by a qualified after-sales technician. Regular checks on the cable by a qualified technician is recommended.
- If the appliance is being connected directly to the mains supply, an omnipolar circuit breaker must be installed with a minimum gap of 3mm between the contacts.
- The installer must ensure that the correct electrical connection has been made and that it complies with safety regulations.

### Connecting the cooktop to the mains power supply

The power supply should be connected in compliance with the relevant local standards to a single-pole circuit breaker. The method of connection is shown below. Power cord is not accessible after installation.

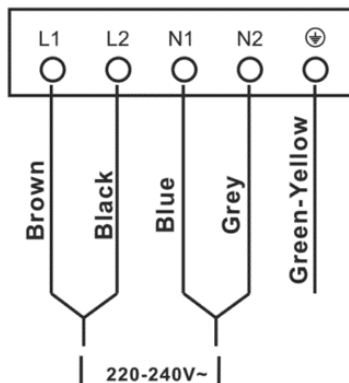



DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

This appliance is labeled in compliance with European directive 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is disposed of correctly, you will help prevent any possible damage to the environment and to human health, which might otherwise be caused if it were disposed of in the wrong way.

The symbol on the product indicates that it may not be treated as normal household waste. It should be taken to a collection point for the recycling of electrical and electronic goods.

This appliance requires specialist waste disposal. For further information regarding the treatment, recover and recycling of this product please contact your local council, your household waste disposal service, or the shop where you purchased it.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.